

CLEANING INSTRUCTIONS

FOR **i3PROJECTOR** — 2015/08/17

- ❖ This is just a simply cleaning instruction for the projector. If the dust is in the engine module, please follow normal repair procedure to replace a new engine module.
- ❖ Suggest to wear dust masks and gloves when cleaning projector.

I. Cleaning Tools

II. Cleaning instruction

1.Lamp Base Projector Cleaning

(1).External cleaning


(2).Internal cleaning

2.Laser Base Projector Cleaning

(1).External cleaning

(2).Internal cleaning

Cleaning Tools

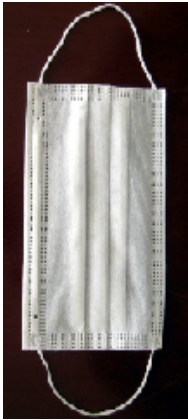

Dust masks



Dust free cloth



Electrostatic ion gun



Anti-static gloves

Cleaning Instructions

1.Lamp base projector cleaning for 2402W and 2802W.

(1).External cleaning

a.Using dust free cloth to clean appearance of the whole projector.



Cleaning Instructions

b. Pull out the filter and using the electrostatic ion gun to clean the filter*2.



Blowing back and forth about 3~5s

Cleaning Instructions

C.Remove the lamp module and using the electrostatic ion gun to clean the lamp module.



First,as picture, using electrostatic to blow the explosion-proof mesh about 3~5s,then,turn over lamp module to blow the other side of explosion-proof mesh.

Cleaning Instructions

(2).Internal cleaning


First,using electrostatic ion gun to blow from inside to outside about 3~5s to avoid dust into inside of machine and engine.




Blowing LVPS



Blowing IO cover

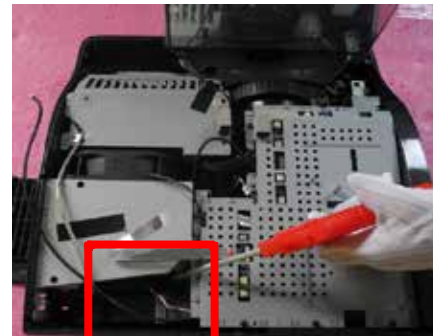

Blowing lamp cover

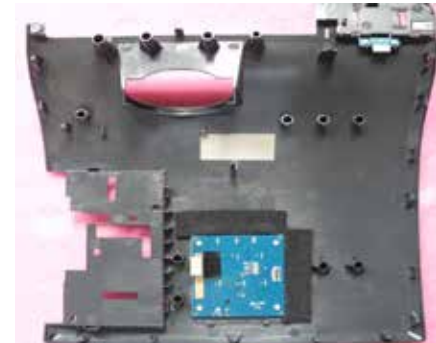

Blowing top cover

Cleaning Instructions

Then, using dust free cloth to clean the surface of the projector that visible.

The dust cleaning is completed.



Put a protective film on the mirror before blowing to prevent the dust entering

Cleaning Instructions

2.Laser Base Projector Cleaning for L3502W,L3302FH andL3002UW .

(1).External cleaning

a.Using dust free cloth to clean appearance of the whole projector.



Cleaning Instructions

b. Pull out the filter and using the electrostatic ion gun to blow the filter*2.



Blowing back and forth about 3~5s


Cleaning Instructions

(2).Internal cleaning

First, using electrostatic ion gun to blow from inside to outside about 3~5s to avoid dust into inside of machine and engine.



Blowing heat sink

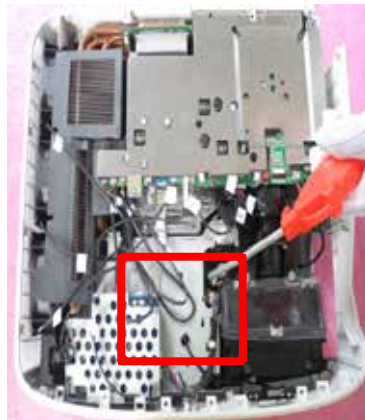

Blowing LVPS



Blowing right cover




Blowing left cover


Cleaning Instructions

Then ,using dust free cloth to clean the surface of the projector that visible.

The dust cleaning is completed.

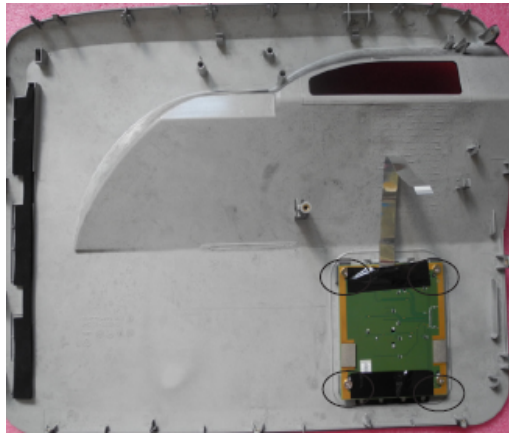

Blowing top cover

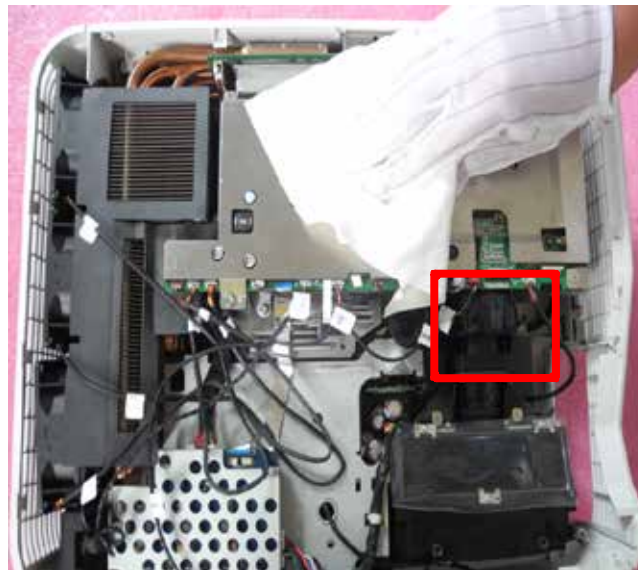

Seal the aperture of engine module before blowing by 3M tape to prevent the dust entering

Thank you